


Step by Step Installation Guide

1. Connect battery first

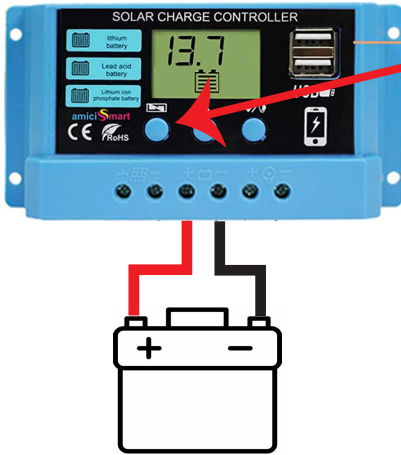

2. Battery Type Selection

Press this button 5 times then long press for 10 seconds.

Then use the "+" and "-" button select battery type.



- b01- Lead-acid Battery
- b02- Lithium Ion Battery
- b03- Lithium Iron Phosphate Battery(LifePo4)

Connect the right solar panel according to your battery.

If you have 12V Battery then you need 12V solar panel.


If you have 24V Battery then you need 24V solar panel.

What is your solar panel voltage?

If your solar panel Voc 20 to 25V. It means your solar panel is 12V.

If your solar panel Voc 40 to 50V. It means your solar panel is 24V.

3. Connect Solar Panel

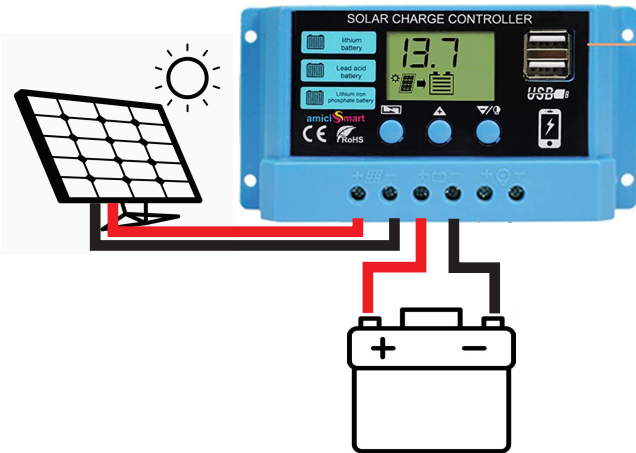

Solar panel according to Solar charge controller.

Per the 10 amp charge controller, you can connect up to a 130-watt solar panel per 12V solar panel.

Per the 10 amp charge controller, you can connect up to a 260-watt solar panel per 24V solar panel.


Per the 20 amp charge controller, you can connect up to a 260-watt solar panel per 12V solar panel.

Per the 20 amp charge controller, you can connect up to a 520-watt solar panel per 24V solar panel.

Per the 30 amp charge controller, you can connect up to a 390-watt solar panel per 12V solar panel.


Per the 30 amp charge controller, you can connect up to a 780-watt solar panel per 24V solar panel.

4. Connect DC Load

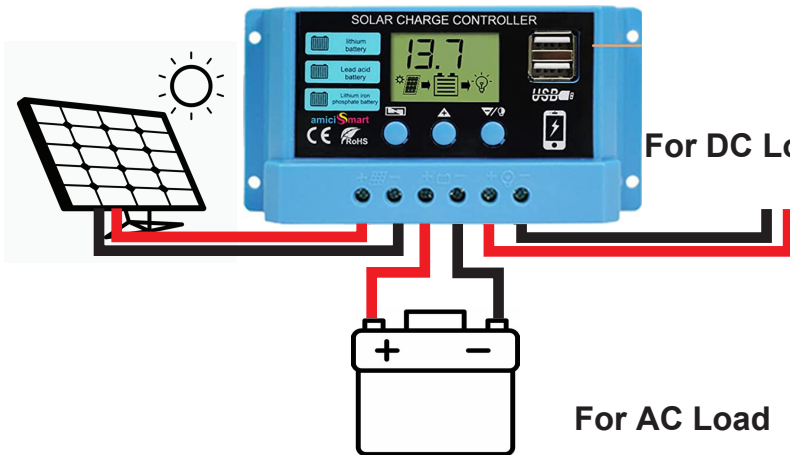

For DC Load Only

5. Connect inverter

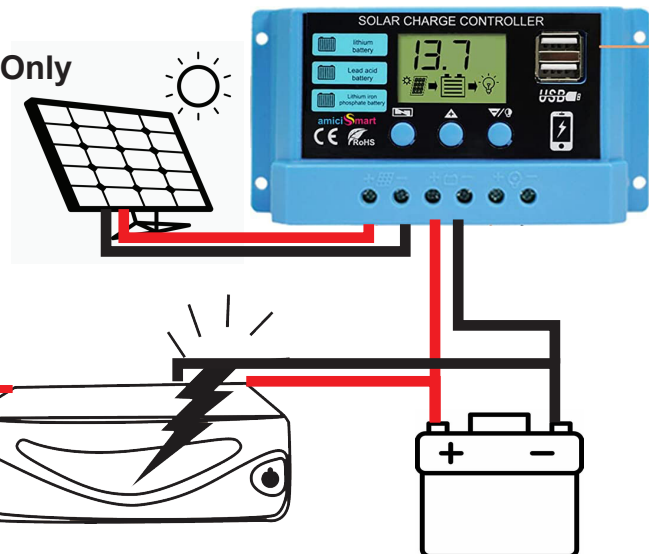

For AC Load

If you want to convert DC to AC?
It would be best if you connected the battery to the inverter.

For more information please read the user manual

स्टेप बाय स्टेप इंस्टॉलेशन गाइड

1. पहले बैटरी कनेक्ट करें




2. बैटरी प्रकार चयन

इस बटन को 5 बार दबाएं और फिर 10 सेकंड के लिए लंबे समय तक दबाएं।


फिर "+" और "-" बटन का उपयोग करें बैटरी प्रकार चुनें।




b01- Lead-acid Battery
b02- Lithium Ion Battery
b03- Lithium Iron Phosphate Battery(LifePo4)

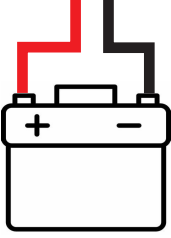

3. सोलर पैनल कनेक्ट करें

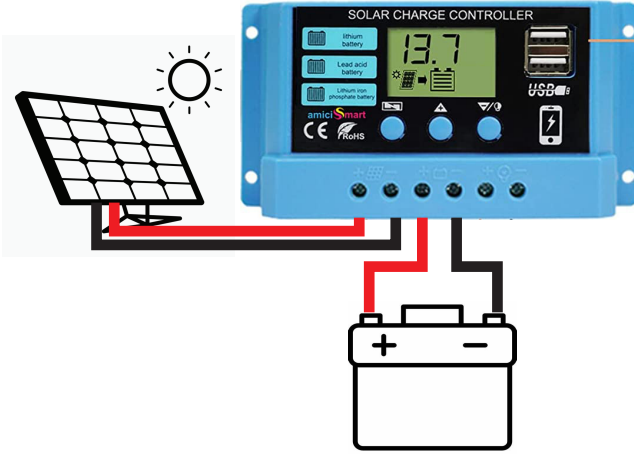


4. डीसी लोड कनेक्ट करें

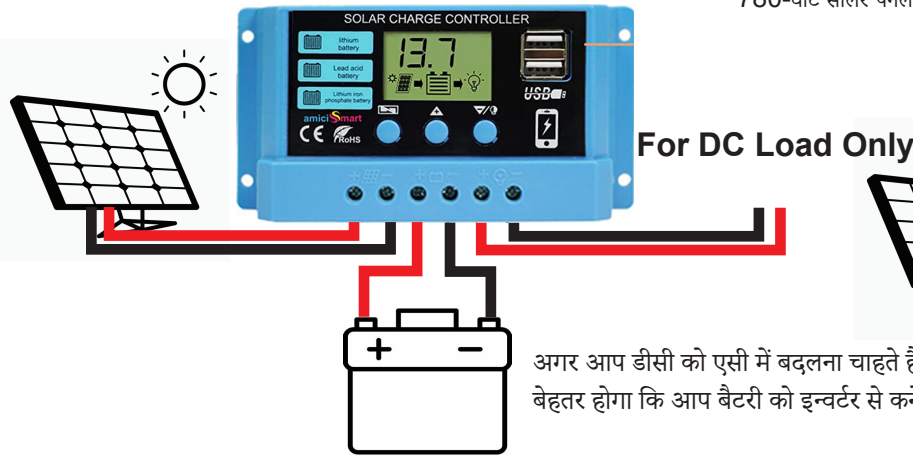

अगर आप डीसी को एसी में बदलना चाहते हैं?
बेहतर होगा कि आप बैटरी को इन्वर्टर से कनेक्ट करें।

For AC Load

5. इन्वर्टर कनेक्ट करें

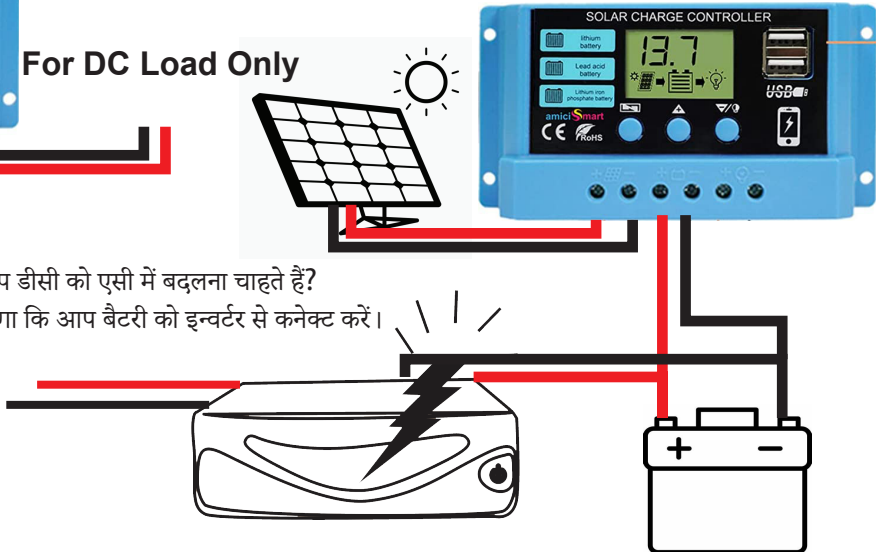

अधिक जानकारी के लिए कृपया उपयोगकर्ता पुस्तिका पढ़ें